

DMX CONTROL

28 CH	30 CH	35 CH	44 CH	SCENES RECORD	FUNCTION	DMX Value
1	1	1	1	1	SHUTTER Shutter closed No function (shutter open) Strobe effect slow to fast No function (shutter open) Pulse-effect in sequences No function (shutter open) Random strobe effect slow to fast No function (shutter open)	000 - 031 032 - 063 064 - 095 096 - 127 128 - 159 160 - 191 192 - 223 224 - 255
2	2	2	2	2	DIMMER 0% to 100% (close to open)	000 - 255
		3	3	3	DIMMER FINE 0% to 100% (close to open)	000 - 255
3	3	4	4	4	CYAN 0% to 100%	000 - 255
4	4	5	5	5	MAGENTA 0% to 100%	000 - 255
5	5	6	6	6	YELLOW 0% to 100%	000 - 255
6	6	7	7	7	CTO 0% to 100%	000 - 255
7	7	8	8	8	COLOR Open Open+Color1 Color1  Color1+Color2 Color2  Color2+ Color3 Color3  Color3+ Color4 Color4  Color4+Color5 Color5  Color5+ Color6 Color6  Color6+ Open Stop to fast(Forward Spin) Fast to stop(Revers Spin) Positioning from 0-360 degrees(Indexing)	000 - 004 005 - 009 010 - 013 014 - 018 019 - 022 023 - 027 028 - 031 032 - 036 037 - 040 041 - 045 046 - 049 050 - 054 055 - 058 059 - 063 064 - 095 096 - 127 128 - 255

MOSAICOXL

28 CH	30 CH	35 CH	44 CH	SCENES RECORD	FUNCTION	DMX Value
8	8	9	9	9	ROTATING GOBO WHEEL Open Position 1  Position 2  Position 3  Position 4  Position 5  Position 6  Position 7  Position 1 Shaking slow to fast Position 2 Shaking slow to fast Position 3 Shaking slow to fast Position 4 Shaking slow to fast Position 5 Shaking slow to fast Position 6 Shaking slow to fast Position 7 Shaking slow to fast Stop to fastest (Forward Wheel Spin) Stop to fastest (Reverse Wheel Spin)	000 - 005 006 - 010 011 - 015 016 - 020 021 - 025 026 - 030 031 - 035 036 - 040 041 - 055 056 - 070 071 - 085 086 - 100 101 - 115 116 - 130 131 - 145 146 - 200 201 - 255
9	9	10	10	10	ROTATING GOBO Positioning from 0-360 degrees (Indexing) Fast to Slow Stop Slow to Fast	000 - 191 192 - 221 222 - 225 226 - 255
			11		PRISM ROT Prism Off Index Fast to Slow Stop Slow to Fast	000 - 000 001 - 127 128 - 189 190 - 193 194 - 255
10		11		11	PRISM ROT Prism Off Index Fast to Slow Stop Slow to Fast	000 - 000 001 - 127 128 - 189 190 - 193 194 - 255
	10		12		PRISM Prism Off Indexed Rotation	000 - 020 021 - 127 128 - 255
	11		13		PRISM Indexed Fast to Slow Stop Slow to Fast	000 - 255 000 - 127 128 129 - 255
			14		RPRISM FINE RPrism Fine	000 - 255
11	12	12	15	12	FROST 1 0% to 100%	000 - 255
12	13	13	16	13	FROST 2 0% to 100%	000 - 255
13	14	14	17	14	FOCUS	000 - 255

MOSAICOXL

28 CH	30 CH	35 CH	44 CH	SCENES RECORD	FUNCTION	DMX Value
		15	18	15	FOCUS FINE	000 - 255
14	15	16	19	16	ZOOM	000 - 255
		17	20	17	ZOOM FINE	000 - 255
15			21		ANIMATION WHEEL Open/No Function Forward stop to fastest Stop Reverse stop to fastest	000 - 003 004 - 127 128 - 131 132 - 255
	16	16		18	ANIMATION Effect Off Linear insertion	000 - 007 008 - 255
	17	19	22	19	ANIMATION ROTATION Stop Fastest to Slowest(Forward Spin) Stop Slowest to fastest(Reverse Spin)	000 - 127 128 - 189 190 - 193 194 - 255
16	18	20	23	20	IRIS From large to small Open and close by arrive slow to fast (Effects) Open from slow to fast (Effects) Close from slow to fast (Effects)	000 - 063 064 - 127 128 - 191 192 - 255
17	19	21	24	21	FRAMING SHUTTER 1 MOVENT Movement from outward to inward	000 - 255
			25		FRAMING SHUTTER 1 MOVENT FINE	000 - 255
18	20	22	26	22	FRAMING SHUTTER 1 SWIVELLING Swivelling from -25 degrees towards 0 degrees 0 degrees Swivelling from 0 degrees to +25 degrees	000-127 128 129-255
			27		FRAMING SHUTTER 1 SWIVELLING FINE	000 - 255
19	21	23	28	23	FRAMING SHUTTER 2 MOVENT Movement from outward to inward	000 - 255
			29		FRAMING SHUTTER 2 MOVENT FINE	000 - 255
20	22	24	30	24	FRAMING SHUTTER 2 SWIVELLING Swivelling from -25 degrees towards 0 degrees 0 degrees Swivelling from 0 degrees to +25 degrees	000-127 128 129-255
			31		FRAMING SHUTTER 2 SWIVELLING FINE	000 - 255
21	23	25	32	25	FRAMING SHUTTER 3 MOVENT Movement from outward to inward	000 - 255
			33		FRAMING SHUTTER 3 MOVENT FINE	000 - 255
22	24	26	34	26	FRAMING SHUTTER 3 SWIVELLING Swivelling from -25 degrees towards 0 degrees 0 degrees Swivelling from 0 degrees to +25 degrees	000-127 128 129-255
			35		FRAMING SHUTTER 3 SWIVELLING FINE	000 - 255
23	25	27	36	27	FRAMING SHUTTER 4 MOVENT Movement from outward to inward	000 - 255

MOSAICOXL

28 CH	30 CH	35 CH	44 CH	SCENES RECORD	FUNCTION	DMX Value
			37		FRAMING SHUTTER 4 MOVENT FINE	000 - 255
24	26	28	38	28	FRAMING SHUTTER 4 SWIVELLING Swivelling from -25 degrees towards 0 degrees 0 degrees Swivelling from 0 degrees to +25 degrees	000-127 128 129-255
			39		FRAMING SHUTTER 4 SWIVELLING FINE	000 - 255
25	27	29	40	29	FRAMING SHUTTERS ROTATION Rotation from left to center Center Rotation from center to right	000-127 128 129-255
			41		FRAMING SHUTTERS ROTATION FINE	000 - 255
26	28	30	42	30	SHUTTERS MACROS No Function Macro 1 Macro 2 Macro 3 Macro 4 Macro 5 Macro 6 Macro 7 Macro 8 Macro 9 Macro 10 Macro 11 Macro 12 Macro 13 Macro 14 Macro 15 Macro 16 Macro 17 Macro 18 Macro 19 Macro 20 Macro 21 Macro 22 Macro 23 Macro 24 Macro 25 Macro 26 Macro 27 Macro 28 Macro 29 Macro 30 Macro 31 Macro 32 Macro 33 Macro 34 Macro 35	000 - 003 004 - 011 012 - 018 019 - 025 026 - 032 033 - 039 040 - 047 048 - 054 055 - 061 062 - 068 069 - 075 076 - 082 083 - 090 091 - 097 098 - 104 105 - 111 112 - 118 119 - 125 126 - 133 134 - 140 141 - 147 148 - 155 156 - 161 162 - 168 169 - 176 177 - 183 184 - 190 191 - 197 198 - 204 205 - 211 212 - 219 220 - 226 227 - 233 234 - 240 241 - 247 248 - 255

MOSAICOXL

28 CH	30 CH	35 CH	44 CH	SCENES RECORD	FUNCTION	DMX Value
27	29	31	43	31	SHUTTERS MACROS SPEED Speed From Slow to Fast	000 - 255
28	30		44		CONTROL No function Enable blackout while color change (Hold 3 Second) Disable blackout while color change (Hold 3 Second) Enable blackout while gobo change (Hold 3 Second) Disable blackout while gobo change (Hold 3 Second) Cyan/Magenta/Yellow/CTO/Color Reset (Hold 3 Second) Shutters Reset (Hold 3 Second) Gobo Reset (Hold 3 Second) Prism Reset (Hold 3 Second) Focus Reset (Hold 3 Second) Zoom Reset (Hold 3 Second) Frost Reset (Hold 3 Second) Effect Reset (Hold 3 Second) No function Reset all (Hold 3 Second) No function	000 - 059 060 - 069 070 - 079 080 - 089 090 - 099 100 - 119 110 - 119 120 - 129 130 - 139 140 - 149 150 - 159 160 - 169 170 - 179 180 - 199 200 - 209 210 - 255
		32		SHOW No Function Show 1 Show 2 Show 3	000 - 063 064 - 127 128 - 191 192 - 255	
		33		CHASE No Function Chase 1 Chase 2 Chase 3 Chase 4 Chase 5 Chase 6 Chase 7 Chase 8	000 - 028 029 - 056 057 - 085 086 - 113 114 - 141 142 - 170 171 - 198 199 - 226 227 - 255	

MOSAICOXL

28 CH	30 CH	35 CH	44 CH	SCENES RECORD	FUNCTION	DMX Value
		34			SCENES No Function Scene 1 Scene 2 Scene 3 Scene 4 Scene 5 Scene 6 Scene 7 Scene 8 Scene 9 Scene 10 Scene 11 Scene 12 Scene 13 Scene 14 Scene 15 Scene 16 Scene 17 Scene 18 Scene 19 Scene 20 Scene 21 Scene 22 Scene 23 Scene 24 Scene 25 Scene 26 Scene 27 Scene 28 Scene 29 Scene 30 Scene 31 Scene 32	000 - 007 008 - 015 016 - 023 024 - 030 031 - 038 039 - 046 047 - 054 055 - 061 062 - 069 070 - 077 078 - 085 086 - 092 093 - 100 101 - 108 109 - 115 116 - 123 124 - 131 132 - 139 140 - 146 147 - 154 155 - 162 163 - 170 171 - 177 178 - 185 186 - 193 194 - 200 201 - 208 209 - 216 217 - 224 225 - 231 232 - 239 240 - 247 248 - 255
		35			SCENE RECORD No Function Edit Scene Mode Edit Scene Mode (Hold 35 and Save)	000 - 010 011 - 128 129 - 255